


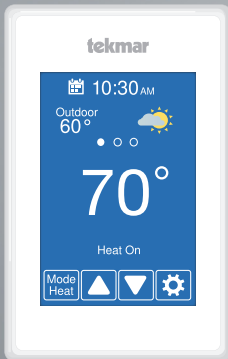

# WiFi Thermostat 561



# Home Screen

After 60 seconds of inactivity, the thermostat home screen displays only the time and the temperature.

The diagram illustrates the thermostat's home screen and its sub-menus. The main screen shows the current time (10:30 AM), outdoor temperature (60°), and floor temperature (70°). It also displays the current mode (Heat) and equipment operation (Heat On). The screen is annotated with labels and arrows pointing to various elements:

- Go to schedule**: Points to the calendar icon and current time.
- Current time**: Points to the time display (10:30 AM).
- Swipe to view:**: Points to the weather icon and outdoor temperature.

  - Weather
  - Outdoor temperature
  - Floor temperature
  - Heat To setting

The floor temperature (70°) is annotated with:

- Current temperature**: Points to the temperature display.
- Equipment operation (Heat On)**: Points to the 'Heat On' status.

The bottom control bar includes:

- Change operating mode**: Points to the 'Mode Heat' button.
- Go to settings**: Points to the gear icon.

Three sub-menus are shown:

- Mode**: A screen with 'Heat' (highlighted in yellow) and 'Off' buttons. It includes 'Save' and 'Cancel' options at the bottom.
- Temperature Adjustment**: A screen showing 'Heat To' set to 70. A yellow 'Hold Until 5:00 PM' button is highlighted. Below it is a 'Save to Schedule' button. It includes a 'Save' (checkmark) and 'Cancel' (X) button at the bottom.
- MENU SELECTION**: A screen with buttons for AWAY, SCHEDULE, DISPLAY, TIME, WIFI, and SETUP. A back arrow button is at the bottom. It shows 'WIFI: Connected' at the bottom.

Annotations for the sub-menus:

- Touch ▲ or ▼ to adjust temperature**: Points to the up and down arrow buttons in the Temperature Adjustment screen.
- 'Save to schedule' applies the new temperature to the current schedule event.**: Points to the 'Save to Schedule' button in the Temperature Adjustment screen.
- Hold overrides the programmed schedule until the time shown**: Points to the 'Hold Until 5:00 PM' button in the Temperature Adjustment screen.


# User Settings

## Away

Use the Away setting to save energy when the building is unoccupied

Operates normally

Operates using the Away temperature selected in the Setup menu

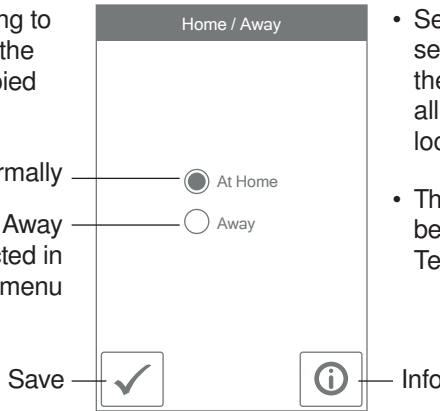

- Selecting the Away setting on a thermostat or the mobile app will affect all devices linked to that location through the app.
- The Away temperature can be adjusted in the Setup / Temps menu.

## Schedule


Current group of program days.

Go to the next group of program days.

Heating temperature

Early Start anticipates the time required to heat a room and starts early.

Set to On to follow the schedule. Set to Off to use the same temperature all of the time.

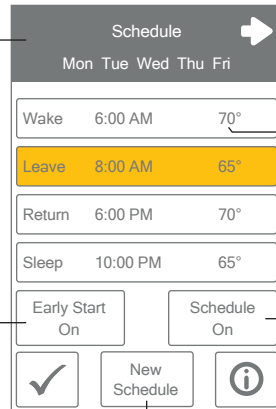


Creates a new schedule.

Set schedule start time

Set heating temperature

Select skip if you don't want a temperature change.

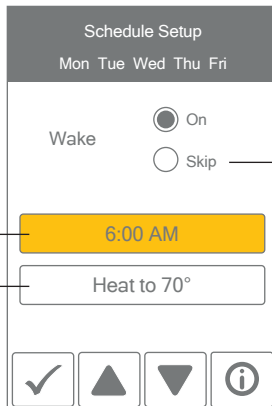

# Display

**DISPLAY 1/2**

Select °F or °C — Temperature Units: °F

Energy Use: Monthly — Energy use. See below.

Brightness when touching the display — Brightness - Active: 80%

Brightness after 60 second timeout of no use — Brightness - Inactive: 50%

Choose the background color — Theme: Light

Language: English — Select English, French or Spanish

← ▲ ▼

10 second count down to allow the screen to be cleaned with a moist cloth. — Clean Screen: Off

Select if the outdoor temperature is shown when inactive — Inactive Outdoor Display: Off

Select if the time is shown when inactive — Inactive Time Display: On

← ▲ ▼

## Energy Use

**Daily Usage**

Today	0 hrs
Yesterday	0 hrs
Tue	0 hrs
Mon	0 hrs
Sun	0 hrs
Sat	0 hrs
Fri	0 hrs

View each day's run time for heating.

✓ Monthly Usage ⓘ

Toggle between Daily and Monthly Usage.

## Time

TIME & DATE

Aug 25 2016

1 30 PM

▲ ▲ ▲

▼ ▼ ▼

✓ OPTIONS ⓘ

When connected to the Internet, the time can be set automatically.

The time and date can be manually set by highlighting a field and then using the ▲ or ▼ buttons.

Time options are:

- 12 hour or 24 hour time format
- Automatic or manual time setting
- Time zone
- Daylight savings time

### **NOTICE**

Incorrectly setting the time and date manually may prevent the thermostat from communicating to the mobile app. Automatic time source is recommended when using an Internet connection.

## NOTICE

Before using the WiFi features of this product, you must accept the Terms of Use, as amended from time to time and available at [Watts.com/terms-of-use](https://www.watts.com/terms-of-use). If you do not accept these terms, this product can still be used without WiFi features.

The thermostat includes a step by step tutorial to setup the WiFi connection.

**Tutorial**

Before first using wi-fi features of this product, you must accept the Terms of Use available at <https://www.watts.com/terms-of-use> by pressing AGREE below.

If you do not accept these terms, this product can still be used without wi-fi features.

### Step 1

Agree to Terms of Use

**WIFI**

Off  
 On

### Step 2

Turn on WiFi

**NETWORK SSID**

Select a network from the list:

### Step 3

Enter wireless network name. It must support WPA2 security encryption.

**Enter Password**

A	B	C	D	E	F
G	H	I	J	K	L
M	N	O	P	Q	R
S	T	U	V	W	X
Y	Z		Shft	A/1	Del

### Step 4

Enter WiFi password.

**ZIP/Postal**

1	2	3	4	5	6
7	8	9	0	-	/
:	;	(	)	\$	&
@	"	.	,	?	!
'	\		Shft	A/1	Del

### Step 5

Enter ZIP or postal code. This determines your location for weather information.

**Time Source**

Automatic  
 Manual

### Step 6

Select if the time is set automatically from the Internet or manually.




To view and adjust the WiFi Thermostat using a mobile phone or tablet, download the Watts Home mobile app from the Apple® iTunes® Store or from the Google Play® Store.

## Add Thermostat to App




### Step 1

Create a new account. Then login using your username and password.

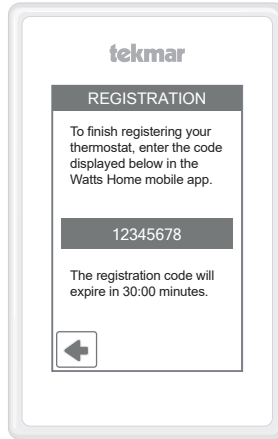


### Step 2

On the thermostat, go to WiFi menu and press Register Device.

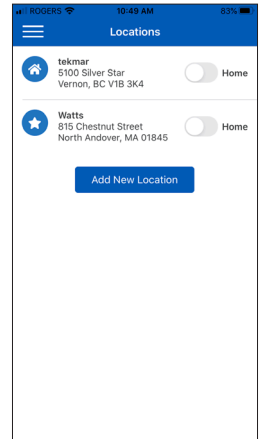


### Step 3

~~Swipe left (Apple) or long hold (Android) to edit the Location name.~~

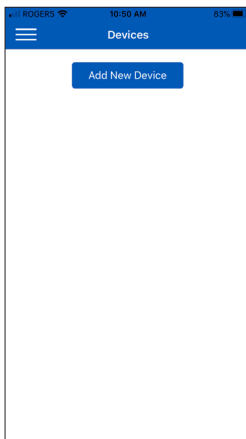


### Step 4

~~Press the Location name and Add New Device.~~

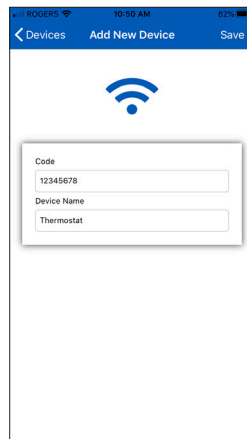

### Step 5

Enter the 8 digit code from the thermostat into the mobile app. Then enter the thermostat's room name.

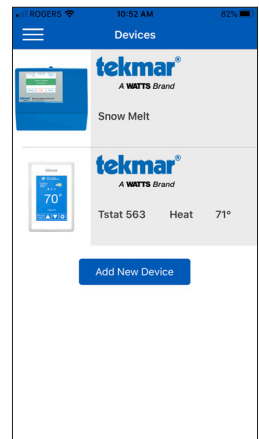


The thermostat is now listed on the Devices page.

# Using the App





## Settings

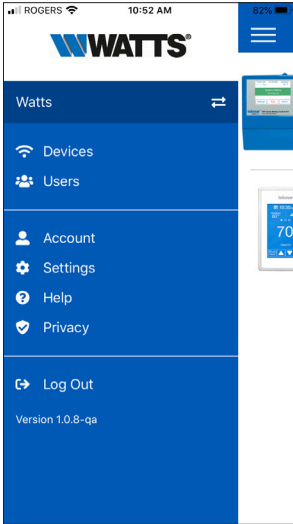

Press  for settings


## Locations

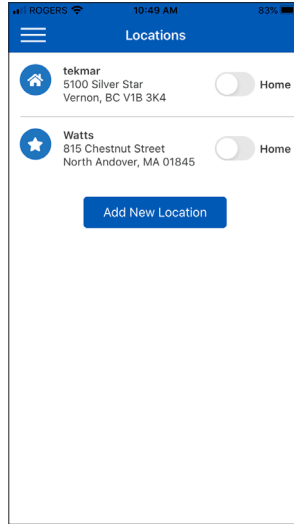

Toggle to  **Away** to save energy when you are away for a day or more


Swipe left or long hold to edit or remove location

## Devices

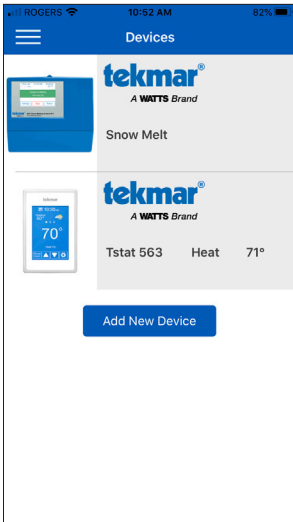

Swipe left or long hold to edit or remove device



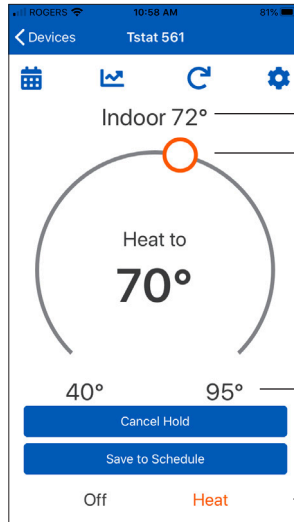

## Thermostat



Current temperature  
Change temperature setting

Limits

Mode

-  ~~Edit schedule~~
-  ~~Energy use~~
-  Refresh
-  ~~Thermostat settings~~





## Settings

ROGERS 10:55 AM 81%

☰ User Settings Save

NOTIFICATIONS

Push

Email

Text

Phone Number  
1555 555 5555 X

PREFERENCES

Language  
English

Temperature Scale  
Fahrenheit

Measurement Scale  
Imperial

Change the notification and unit settings for your account

## My Account

ROGERS 10:54 AM 81%

☰ Account

The following information is managed outside of the Watts Home application. Please click the 'Update' button below to make changes in the system of record.

user name

user@email.com

Update your user name

## Invite Users

ROGERS 10:55 AM 81%

< Users Invite User

name@email.com

Plumber

Invite other users to access all the devices at a location

Page left intentionally blank



Page left intentionally blank

**Need help? Go to our website or contact us.**

tekmarControls.com | tekmar.customerservice@wattswater.com | 1-800-438-3903

**tekmar**<sup>®</sup>

A **WATTS** Brand

Tel: 1-800-438-3903 • Fax: (250) 984-0815  
tekmarControls.com

