 




User Manual


WiFi Thermostat 561



WARNING

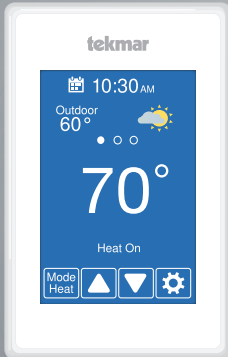


Please read carefully before proceeding with installation. Your failure to follow any attached instructions or operating parameters may lead to the product's failure. Keep this Manual for future reference.



tekmar[®]
A **WATTS** Brand

Home Screen

After 60 seconds of inactivity, the thermostat home screen displays only the time and the temperature.

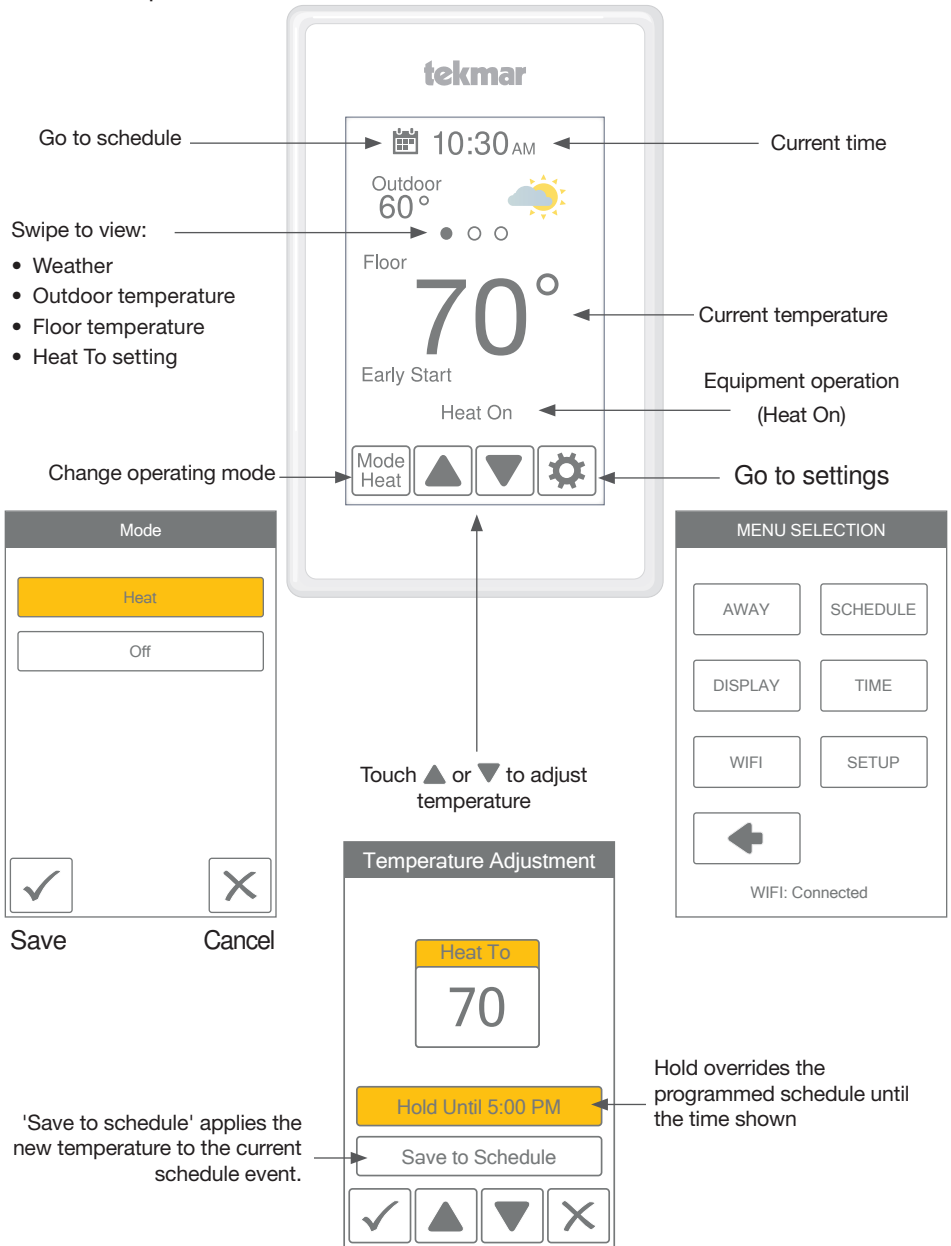

User Settings

Away

Use the Away setting to save energy when the building is unoccupied

Operates normally → At Home

Operates using the Away temperature selected in the Setup menu → Away

Save →

Info →

- Selecting the Away setting on a thermostat or the mobile app will affect all devices linked to that location through the app.
- The Away temperature can be adjusted in the Setup / Temps menu.

Schedule

Current group of program days. →

Schedule →

Mon Tue Wed Thu Fri

Wake	6:00 AM	70°
Leave	8:00 AM	65°
Return	6:00 PM	70°
Sleep	10:00 PM	65°

Early Start On Schedule On

 New Schedule

← Go to the next group of program days.

Heating temperature

Early Start anticipates the time required to heat a room and starts early.

Set to On to follow the schedule. Set to Off to use the same temperature all of the time.

Creates a new schedule.

Set schedule start time →

Set heating temperature →

Schedule Setup

Mon Tue Wed Thu Fri

Wake On
 Skip

6:00 AM

Heat to 70°

 ▲ ▼

← Select skip if you don't want a temperature change.

Display

DISPLAY 1/2

Select °F or °C → Temperature Units: °F

Energy Use: Monthly ← Energy use. See below.

Brightness when touching the display → Brightness - Active: 80%

Brightness after 60 second timeout of no use → Brightness - Inactive: 50%

Choose the background color → Theme: Light

Language: English ← Select English, French or Spanish

← ▲ ▼

10 second count down to allow the screen to be cleaned with a moist cloth. →

DISPLAY OPTIONS 2/2

Clean Screen: Off

Inactive Time Display: On ← Select if the time is shown when inactive

Select if the outdoor temperature is shown when inactive → Inactive Outdoor Display: Off

← ▲ ▼

Energy Use

Daily Usage

Today	0 hrs
Yesterday	0 hrs
Tue	0 hrs
Mon	0 hrs
Sun	0 hrs
Sat	0 hrs
Fri	0 hrs

View each day's run time for heating.

✓ Monthly Usage ⓘ

Toggle between Daily and Monthly Usage.

Time

TIME & DATE

Aug 25 2016

1 30 PM

▲ ▲ ▲

▼ ▼ ▼

OPTIONS ⓘ

When connected to the Internet, the time can be set automatically.

The time and date can be manually set by highlighting a field and then using the ▲ or ▼ buttons.

Time options are:

- 12 hour or 24 hour time format
- Automatic or manual time setting
- Time zone
- Daylight savings time

NOTICE

Incorrectly setting the time and date manually may prevent the thermostat from communicating to the mobile app. Automatic time source is recommended when using an Internet connection.

WiFi

NOTICE

Before using the WiFi features of this product, you must accept the Terms of Use, as amended from time to time and available at [Watts.com/terms-of-use](https://www.watts.com/terms-of-use). If you do not accept these terms, this product can still be used without WiFi features.

The thermostat includes a step by step tutorial to setup the WiFi connection.

Tutorial

Before first using wi-fi features of this product, you must accept the Terms of Use available at <https://www.watts.com/terms-of-use> by pressing AGREE below.

If you do not accept these terms, this product can still be used without wi-fi features.

Step 1

Agree to Terms of Use

WIFI

Off
 On

Step 2

Turn on WiFi

NETWORK SSID

Select a network from the list:

Step 3

Enter wireless network name. It must support WPA2 security encryption.

Enter Password

A	B	C	D	E	F
G	H	I	J	K	L
M	N	O	P	Q	R
S	T	U	V	W	X
Y	Z		Shft	A/1	Del

Step 4

Enter WiFi password.

ZIP/Postal

1	2	3	4	5	6
7	8	9	0	-	/
:	;	()	\$	&
@	"	.	,	?	!
'	\		Shft	A/1	Del

Step 5

Enter ZIP or postal code. This determines your location for weather information.

Time Source

Automatic
 Manual

Step 6

Select if the time is set automatically from the Internet or manually.

Need help? Go to our website or contact us.

tekmarControls.com | tekmar.customerservice@wattswater.com | 1-800-438-3903

tekmar[®]

A WATTS Brand

All specifications are subject to change without notice.

Tel: 1-800-438-3903 • Fax: (250) 984-0815
tekmarControls.com