

ACV Schematic

LEAD FREE*

952GS (Globe)

Rate-of-Flow Control Valve with Pressure Sustaining Feature

Features

- Throttles to maintain constant rate-of-flow
- Throttles to maintain minimum upstream pressure
- Adjustable Closing Speed
- Orifice Plate Assembly is remote mounted (field installed)
- Rate-of-Flow and Sustaining setpoints are separately adjustable

Standard Components


- 1 - Main Valve (905GS - Single Chamber)
- 2 - Rate-of-Flow Control
- 3 - Pressure Sustaining Control
- 4 - Adjustable Closing Speed
- 5 - Orifice Plate Assembly
- X - Isolation Cocks

Options and Accessories

- FC - Flo-Clean Strainer
- Y - Y-Strainer (Replaces Flo-Clean)
- AOS – Adjustable Opening Speed
- P - Position Indicator
- L - Limit Switch

Operation

The ACV Rate-of-Flow Control Valve with Pressure Sustaining Feature is designed to automatically limit flow rate to a constant, adjustable, maximum, and sustain a minimum upstream pressure. The flow control action of the valve is controlled by a normally open, differential control pilot designed to: 1) Open (allowing fluid out of the main valve cover chamber) when the differential pressure across the orifice plate is below its adjustable set point, and, 2) Close (allowing fluid to fill the main valve cover chamber) when the differential pressure across the orifice plate is above its adjustable set point. A decrease in differential pressure causes the valve to modulate towards an open position, increasing flow rate. An increase in differential pressure causes the valve to modulate towards a closed position, decreasing flow rate.

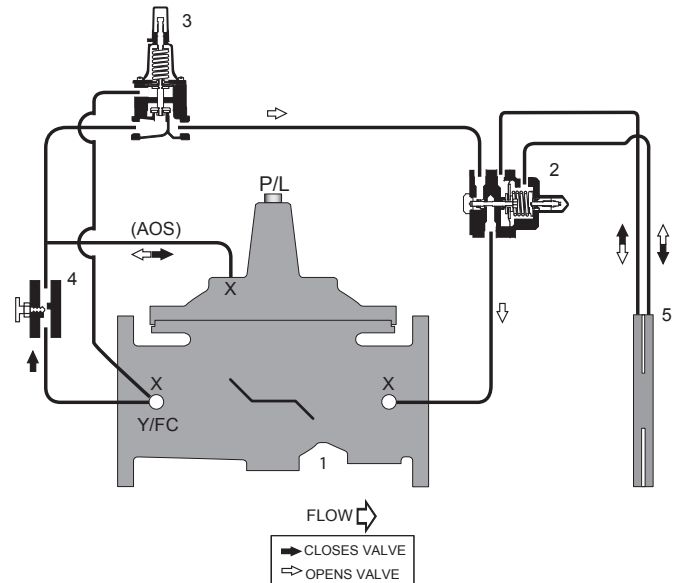

The normally closed sustaining pilot remains open when upstream pressure is above the adjustable setpoint, and modulates toward a closed position if upstream pressure falls below the setpoint. As the sustaining pilot closes, fluid is directed into the main valve cover chamber, allowing the valve to modulate toward a closed position, raising upstream pressure. Normal flow control operation resumes when upstream pressure is above the sustaining pilot setpoint.

The Orifice Plate Assembly should be installed three to five pipe diameters downstream of the Rate-of-Flow Valve, and field connected with 3/8" minimum copper tubing in accordance with factory piping schematic. Please specify desired flow rate prior to ordering.

***The wetted surface of this product contacted by consumable water contains less than 0.25% of lead by weight.**

NOTICE

The information contained herein is not intended to replace the full product installation and safety information available or the experience of a trained product installer. You are required to thoroughly read all installation instructions and product safety information before beginning the installation of this product.

Ames Fire & Waterworks product specifications in U.S. customary units and metric are approximate and are provided for reference only. For precise measurements, please contact Ames Fire & Waterworks Technical Service. Ames Fire & Waterworks reserves the right to change or modify product design, construction, specifications, or materials without prior notice and without incurring any obligation to make such changes and modifications on Ames Fire & Waterworks products previously or subsequently sold.

USA: Backflow Tel: (978) 689-6066 • Fax: (978) 975-8350 • AmesFireWater.com
USA: Control Valves Tel: (713) 943-0688 • Fax: (713) 944-9445 • AmesFireWater.com
Canada: Tel: (905) 332-4090 • Fax: (905) 332-7068 • AmesFireWater.ca
Latin America: Tel: (52) 81-1001-8600 • Fax: (52) 81-8000-7091 • AmesFireWater.com

SCH-A-ACV-952GS 1626



A WATTS Brand

© 2016 Ames Fire & Waterworks